


Instruction manual

Slimdust mat

SLD - 600 , SLD - 1200

1. Specification
2. How to install
3. How to clean
4. Caution

1. Specification

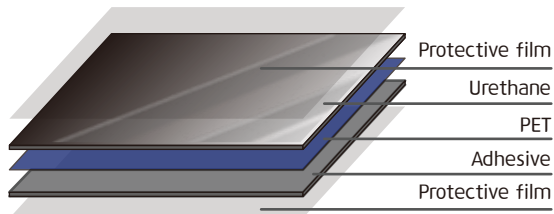

<Structure>

Product Name: SlimDust Mat

Model Name: SLD-1200

Size: 1.2m(W)x10m(L)x0.65mm(thickness)

0.6m(W)x10m(L)x0.65mm(thickness)

Material: Urethane, PET


Color: Gray, Blue

ROHS	Safe product as it passed the 8 major ROHS items		ESD Features : 10 ⁸ Ω Can also be used in electronics
-------------	--	--	---

2. How to install



- ① Remove the protective film on the back and attach a part of the mat to the floor.
(The side with the logo is the top.)
- ② Hold the back side protective film with the roll and spread it out. (about 1~2m)
- ③ Spray water on the film with the logo drawn on it.

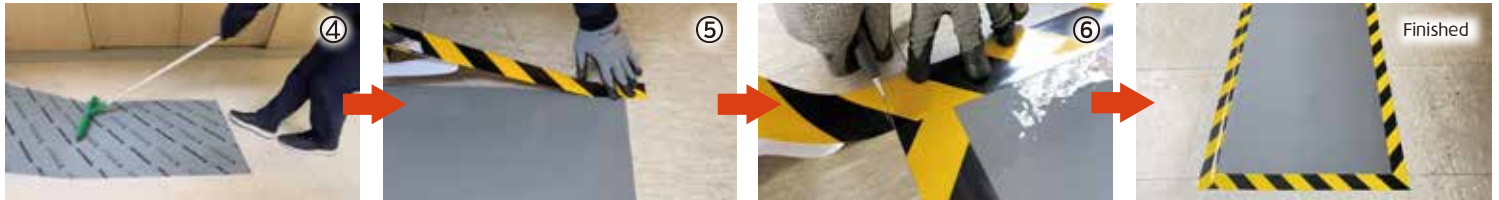

- ④ Rub the mat with a squeegee to attach it to the floor, then remove the top protective film.
- ⑤ Attach line tape to the edge of the mat. (mat half, floor half)
- ⑥ Cut and finish the line tape where it overlaps.

※ Edge finish
Prevents water from seeping into the back of the mat when cleaning.



3. How to clean



- ① Spray water mixed with neutral detergent(pH7~8) on the mat.
 - ② Scrape away foreign substances on the mat with a sponge squeegee.
 - ③ Remove water with a rubber squeegee.
 - ④ Wipe off the collected water with a mop.
- # Once cleaning is complete, the mat's adhesiveness is restored and it can be reused immediately.
It can be easily cleaned using a floor scrubbers.



4. Caution

- ① Traffic(logistic) directions. the cleaning field should be passed, in a straight.
(risk of damage while braking or accelerating sharply, sudden direction changes, U-turns.)
 - ② Please lift pallet or load at least 100 mm from the floor on the mat.
 - ③ Make sure that nothing that could damage the mat, such as sharp pieces or bolts, falls on the mat.
 - ④ Neutral detergent (pH 7.0 ~ 8.0) must be used.
- ※ If you do not use a neutral detergent, it will adversely affect the mat's adhesiveness and affect the mat's lifespan.

TAEHOON CST
(주)태훈씨에스틱

#715, 27, Dunchon-daero 457beon-gil,
Jungwon-gu, Seongnam-si, Gyeonggi-do
TEL : 031-737-2350
FAX : 031-737-2355
E-Mail : info@taehoon-korea.com
HOME PAGE : www.taehoon-korea.com